

AC009 Installation Guide

monit | rally


© Monit Limited



3 Button Hand Remote

AC009

 Suitable for all types of vehicles.



Installation

The Monit Hand Remote needs to be setup prior to operation. Please carefully follow the steps below.

Step 1:

Decide which of the two function options "Remote Option 1" or "Remote Option 2" as seen below that you would like to set up you remote to control.

"Remote Option 1" - Hand remote functions	
Button	Function
'+' Top button	Adjust distance up
'-' Middle button	Adjust distance down
Bottom button	Toggles distance counting direction - count up or count down.

"Remote Option 2" - Hand remote functions	
Button	Function
'+' Top button	Adjust distance up
'-' Middle button	Adjust distance down
Bottom button	Clears the Interval Distance counter

Step 2:

Select your chosen remote option on your Monit G100+/G200+ in each of the Auxiliary A and Auxiliary B settings as per the procedure below.

Note: It is essential that both Auxiliaries A and B are set to the same Remote Option

1. Select the 'Settings' menu
2. Select 'Auxiliary A'
3. Scroll down to select the Remote Option number you wish to use and press OK
4. Select 'Auxiliary B'
5. Scroll down to select the same Remote Option you selected in step 3 and press OK

Step 3:

Plug your AC009 3 Button Hand Remote into the loom of your Monit G100+/G200+. Installation is complete.

Trouble Shooting:

If the remote does not function as expected please follow the following steps to resolve the issue.

- Ensure that both Auxiliary A and Auxiliary B are set to the same Remote Option choice
- Check the wiring connections to ensure that the Monit loom and the hand remote cable are both in good condition

If your plugs have been cut off the loom or cable previously then you can wire the hand remote to the Monit G100+/G200+ as per the below table:

Hand Remote Wire	Monit G100+/200+ Wire
Blue	White
Brown	Brown
Black	Black

Contact Monit on info@monitrally.com for technical support if the above information does not resolve your issues.

Advanced:

If you wish to use alternate Auxiliary functions with your hand remote you may do this but the remote will function in the manner as per below:

- The top button will trigger the Auxiliary A function
- The middle button will trigger the Auxiliary B function
- The bottom button will trigger both Auxiliary A and B functions at the same time.